

# 80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION



80002-FULL/QUEEN BED <https://youtu.be/B2qCUWHUUqw>

Scan QR Code for Assembly Instruction video or call customer service for video file.

**IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.**

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

**"DO NOT OVERTIGHT ANY HARDWARE"**


**WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.**

## TABLE OF CONTENTS


HARDWARES LIST	PAGE 2
PARTS LIST	PAGE 3
PARTS' LOCATION	PAGE 4
ASSEMBLY STEPS	PAGE 5 - 8
ASSEMBLY COMPLETED	PAGE 9

## ASSEMBLY TOOLS REQUIRED

### 1. Screwdriver (not provide)



### 2. Hammer (not provide)

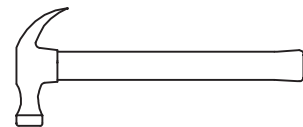

## ATTENTION

### 1. Box Spring Requirement for Standard Bed Frames:

Please note that our standard bed frames are designed to be used with a box spring. Ensure that you have a suitable box spring for optimal performance.

### 2. Two-Person Installation Recommendation:

We strongly recommend that two people collaborate to install the repair kit. This ensures efficiency and safety during the installation process.













### 3. Regular Screw Tightness Check:

As part of regular maintenance, it is advised to check the tightness of all screws every 6-8 weeks. This helps maintain the stability and durability of your bed frame.



# 80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION

## HARDWARES LIST




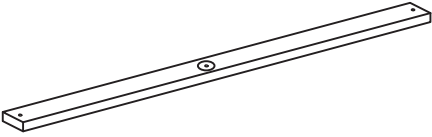

ITEM	DESCRIPTION	DRAWING	QTY
A	JCBC SCREW M8 x 20MM		4 PCS
B	JCBC SCREW M6 x 25MM		8 PCS
D	JCBC SCREW M8 x 50MM		4 PCS
G	WOOD DOWEL M10 x 30MM		4 PCS
H	SPRING WASHER M6 x 13MM		8 PCS
I	FLAT WASHER M6 x 19MM		8 PCS
J	CSK C/B SCREW (M4 x 32MM)		8 PCS
K	M5 ALLEN KEY (65MM)		1 PC
L	M4 ALLEN KEY (65MM)		1 PC
M	SPRING WASHER M8 x 14MM		4 PCS
N	FLAT WASHER M8 x 22MM		4 PCS
O	SUPPORT LEG ADJUSTABLE FEET		4 PCS

\*Additional hardware included



80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION


PARTS LIST

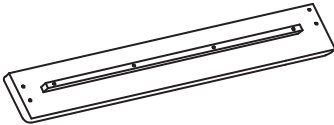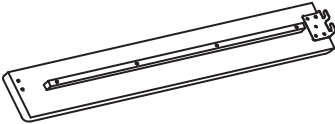ITEM	DESCRIPTION	DRAWING	QTY
6	SIDE RAIL (L/R)		2 PCS
7	SIDE RAIL (L/R)		2 PCS
8	SIDE RAIL LEG		2 PCS
19	SLAT		4 PCS
20	SUPPORT LEG WITH HANGER BOLT		4 PCS



80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION

PARTS ' LOCATION

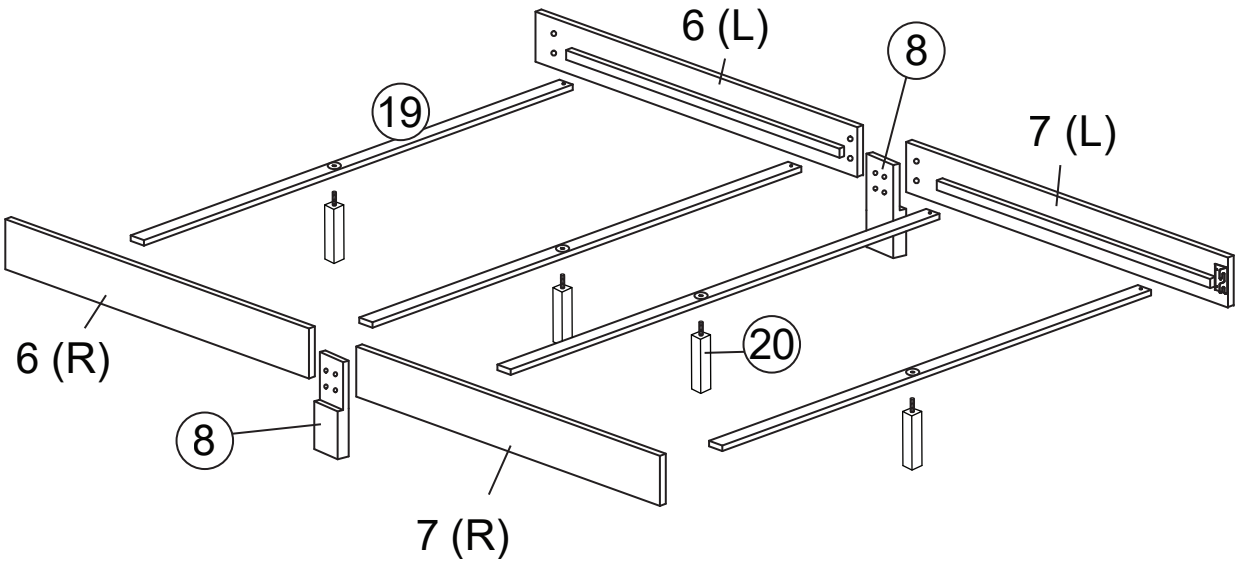





## 80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION

### STEP 1

Please follow the instructions from step 1 to step 3 to assemble the repair kits.

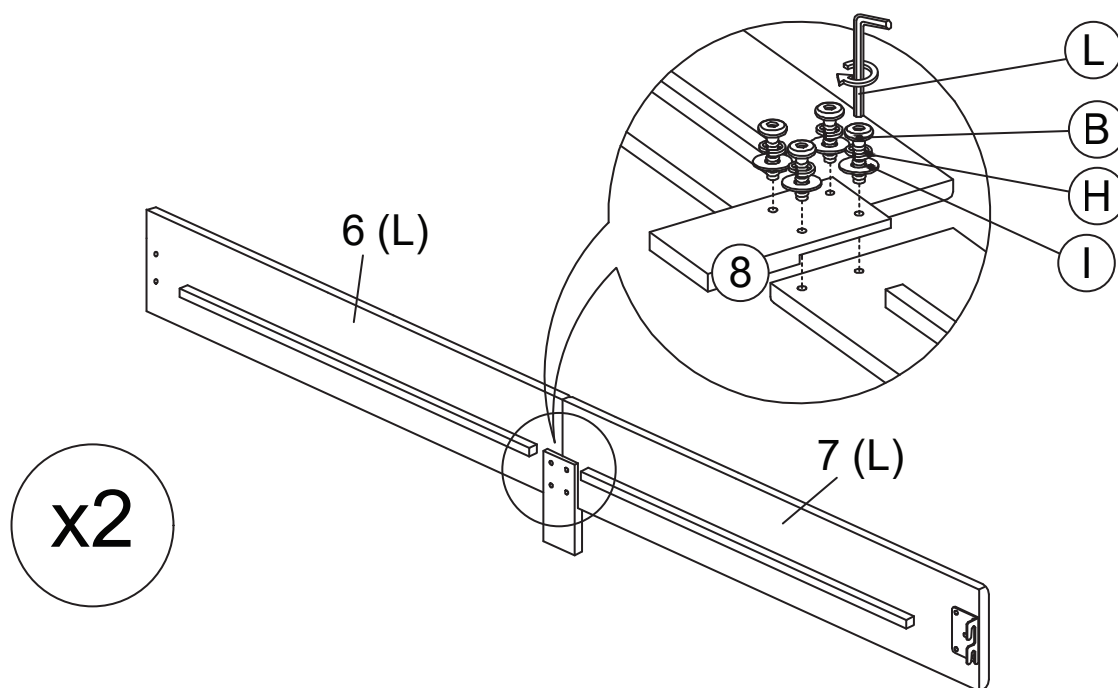


### STEP 2

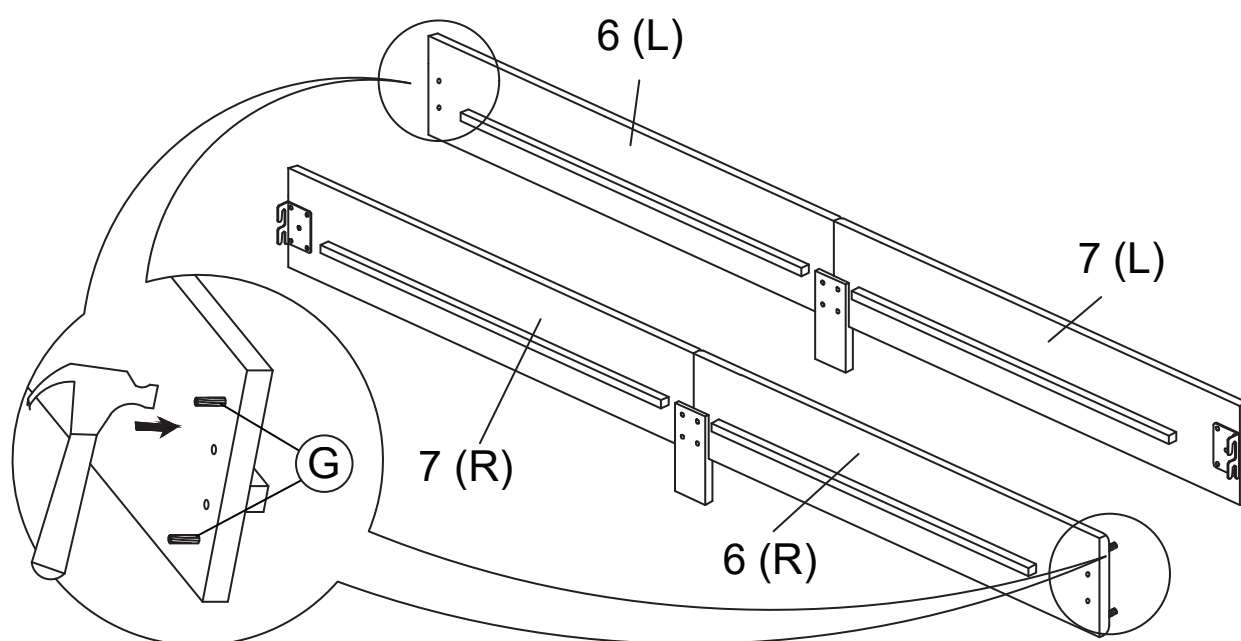




## 80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION

### STEP 3

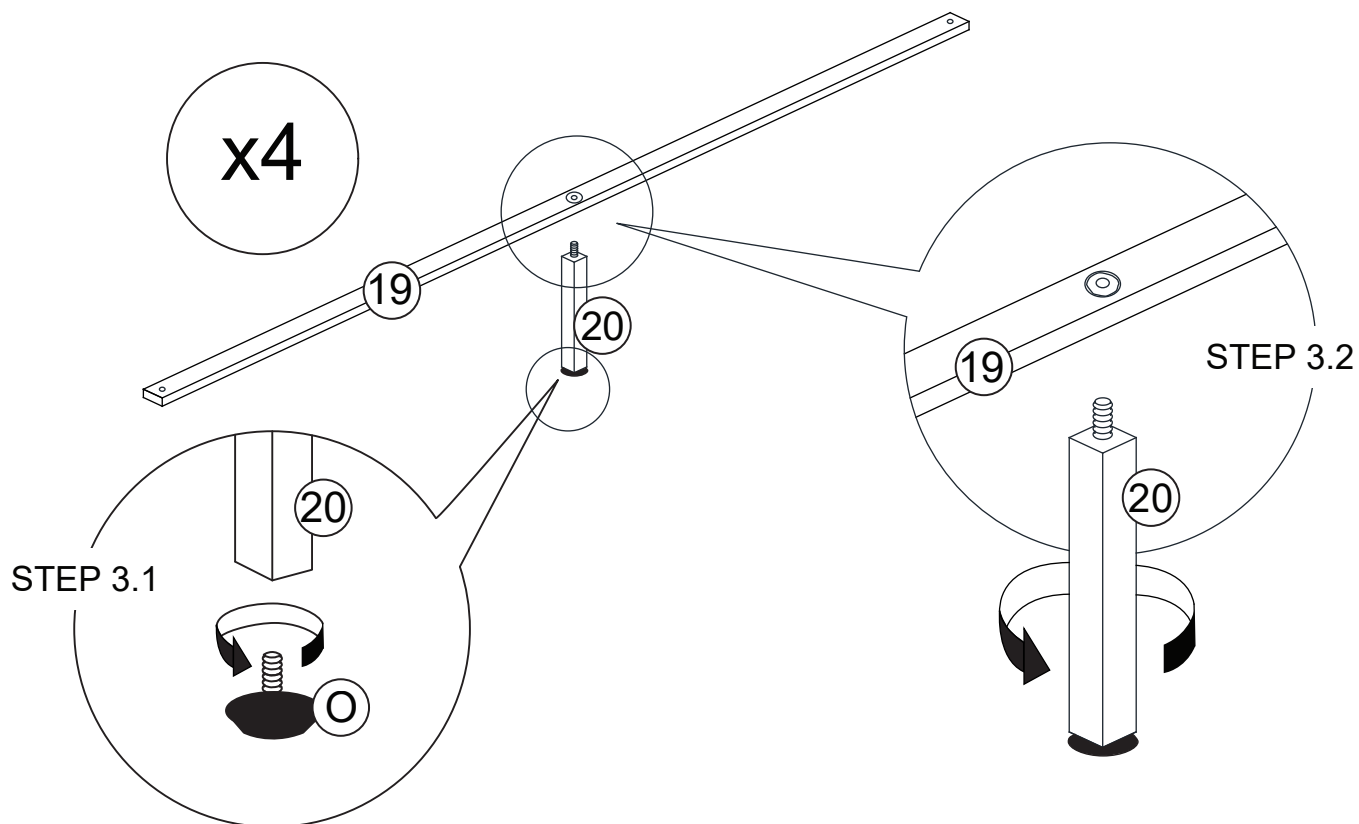

### STEP 4

Please follow the instructions from step 4 to step 8 to disassemble the existing bed in order to replace the repair kits.

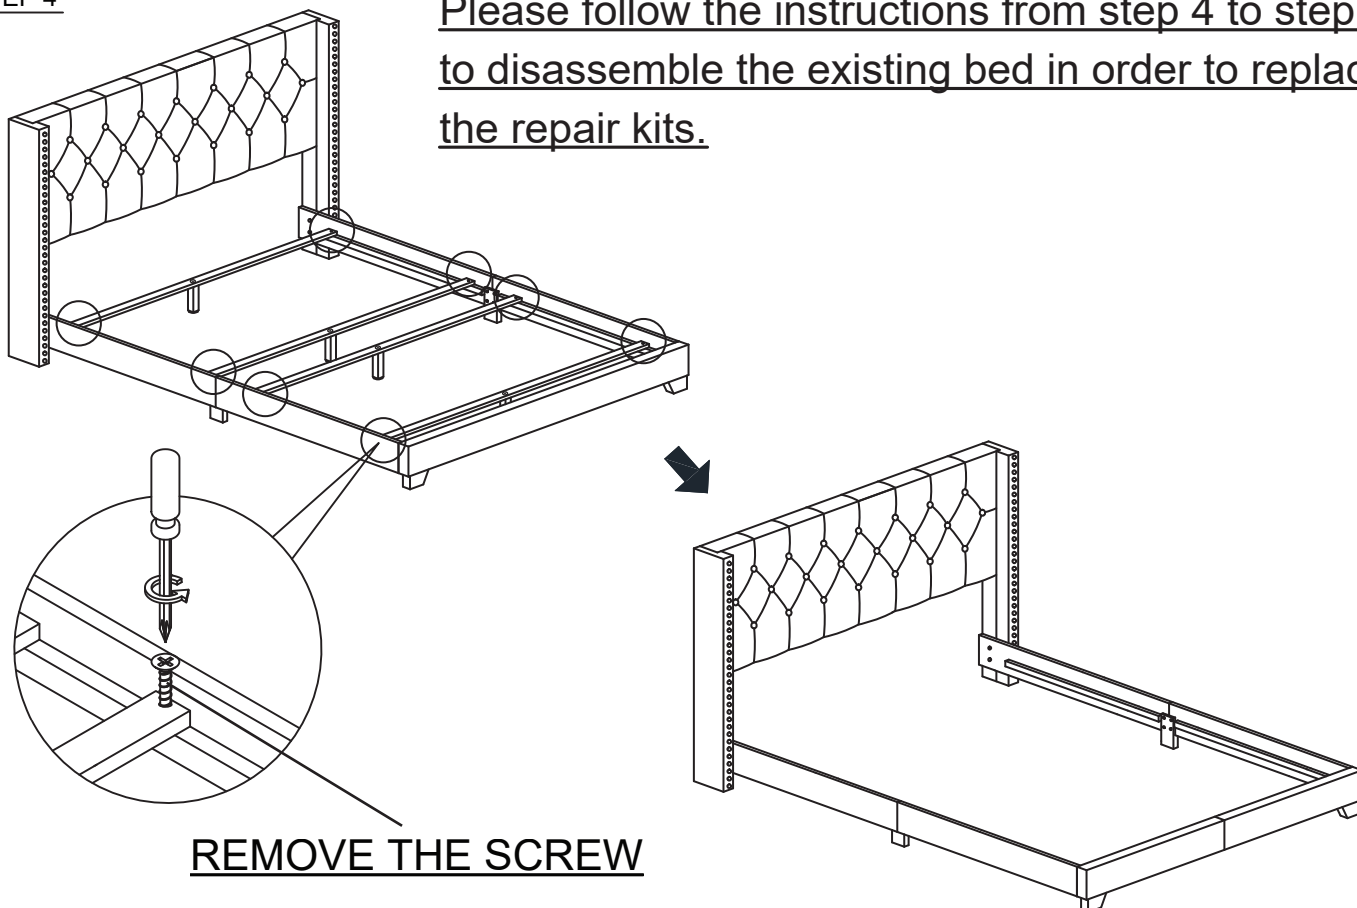




## 80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION


### STEP 5

#### REMOVE THE SCREW

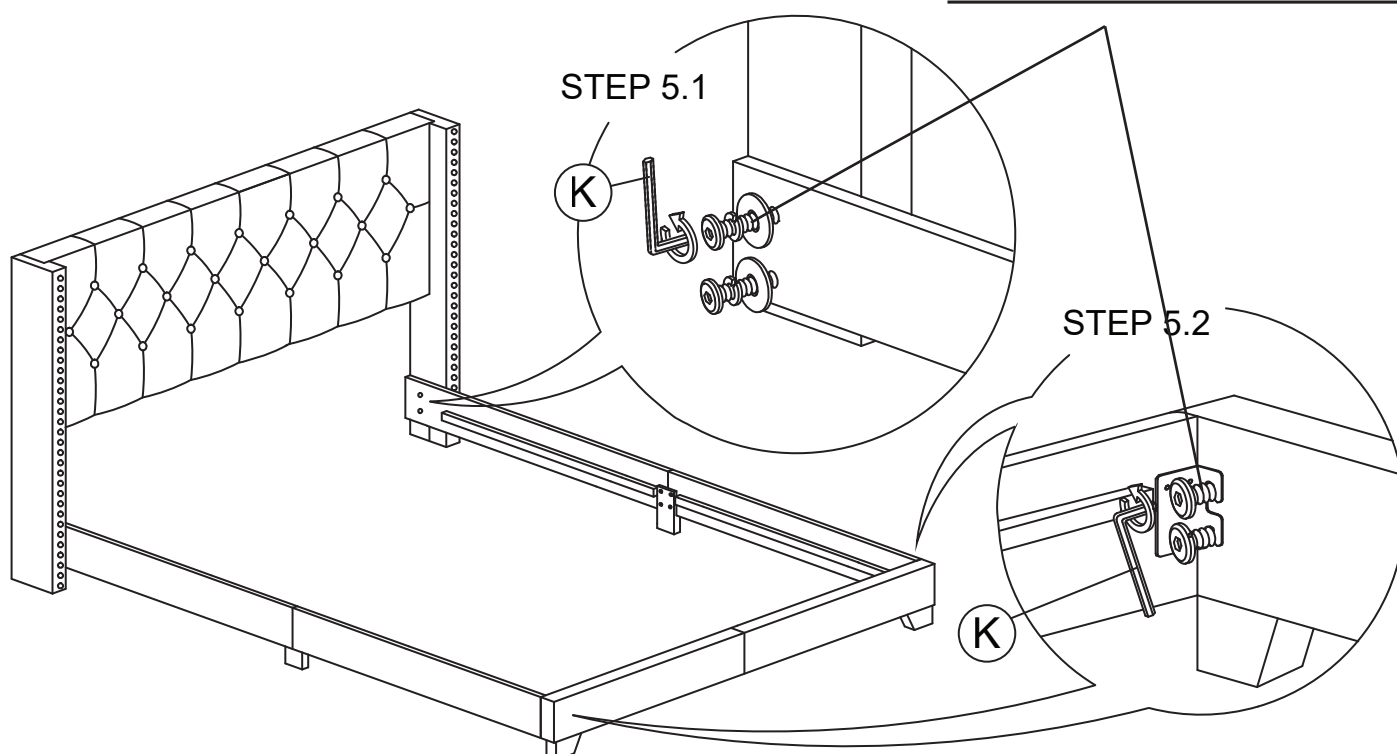

### STEP 6


#### REMOVE THE EXISTING SIDE RAIL SET, AND THEN REPLACE IT WITH THE NEW SIDE RAIL SET.

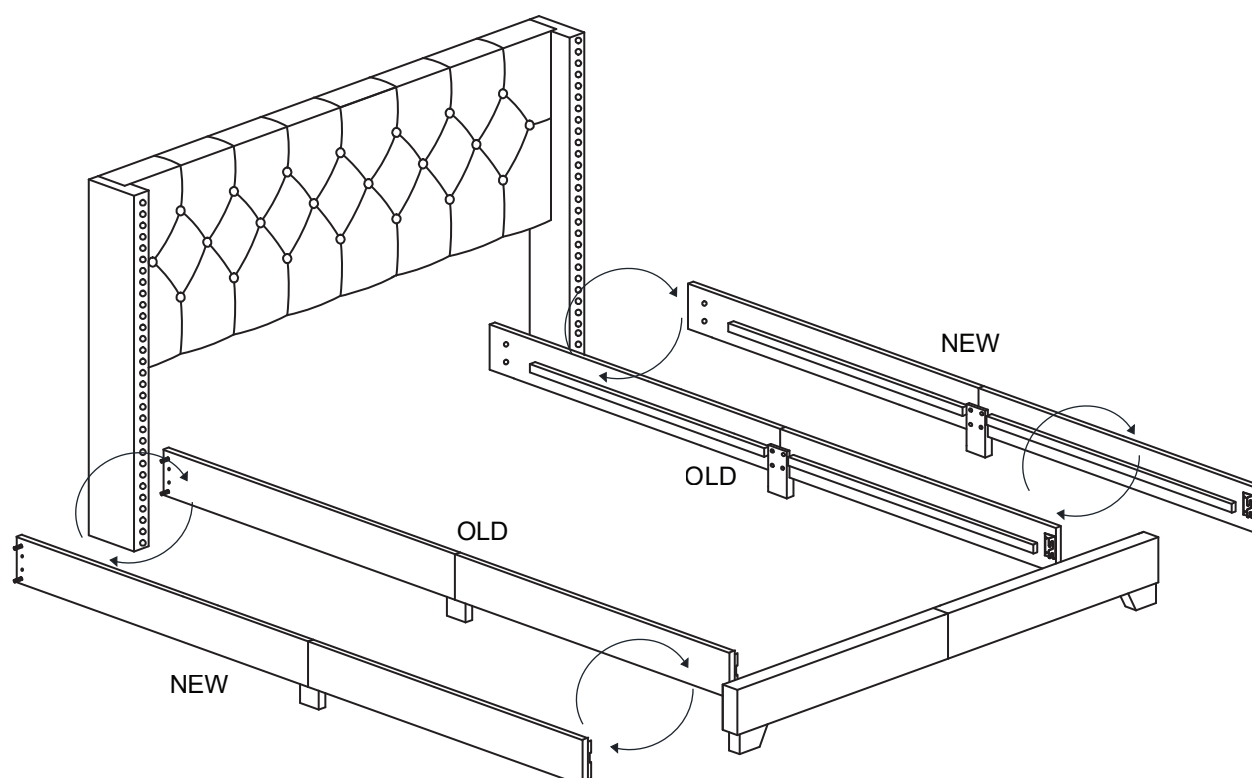




80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION

STEP 7

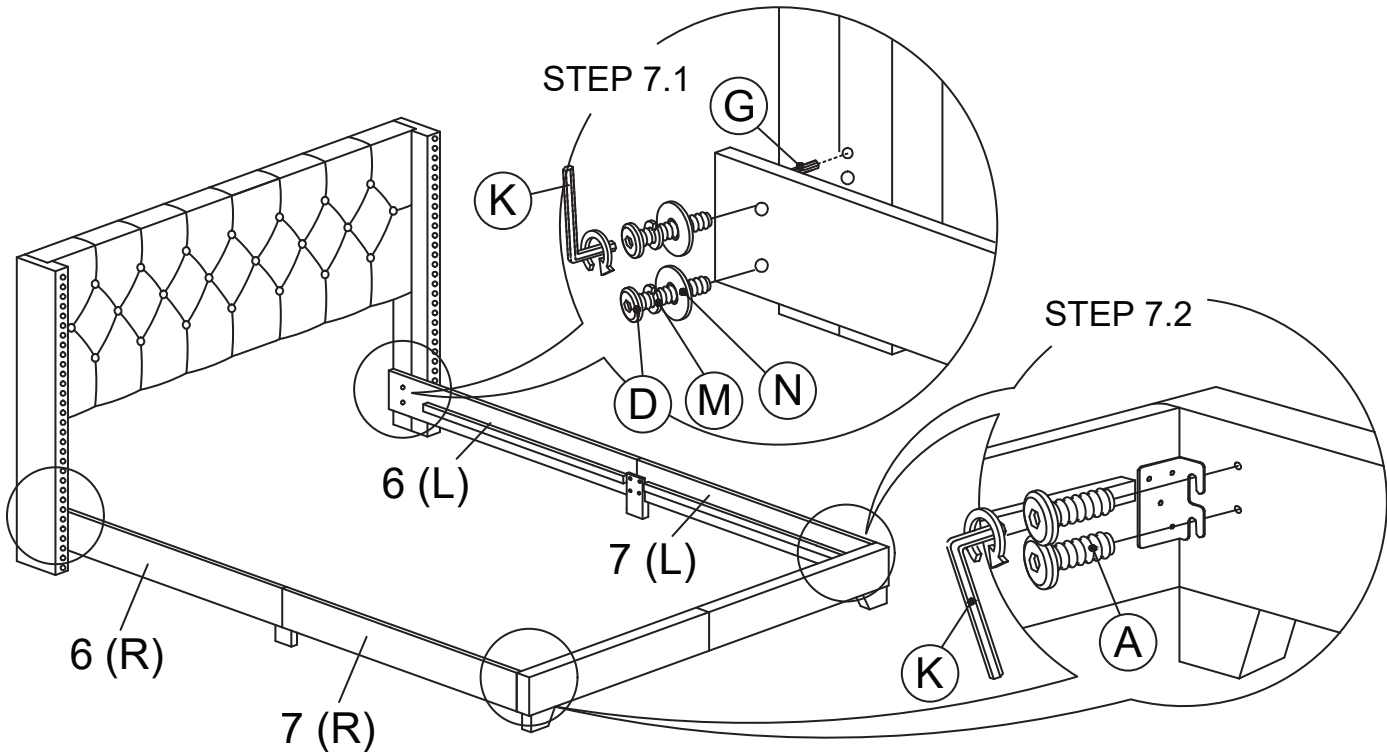


STEP 8

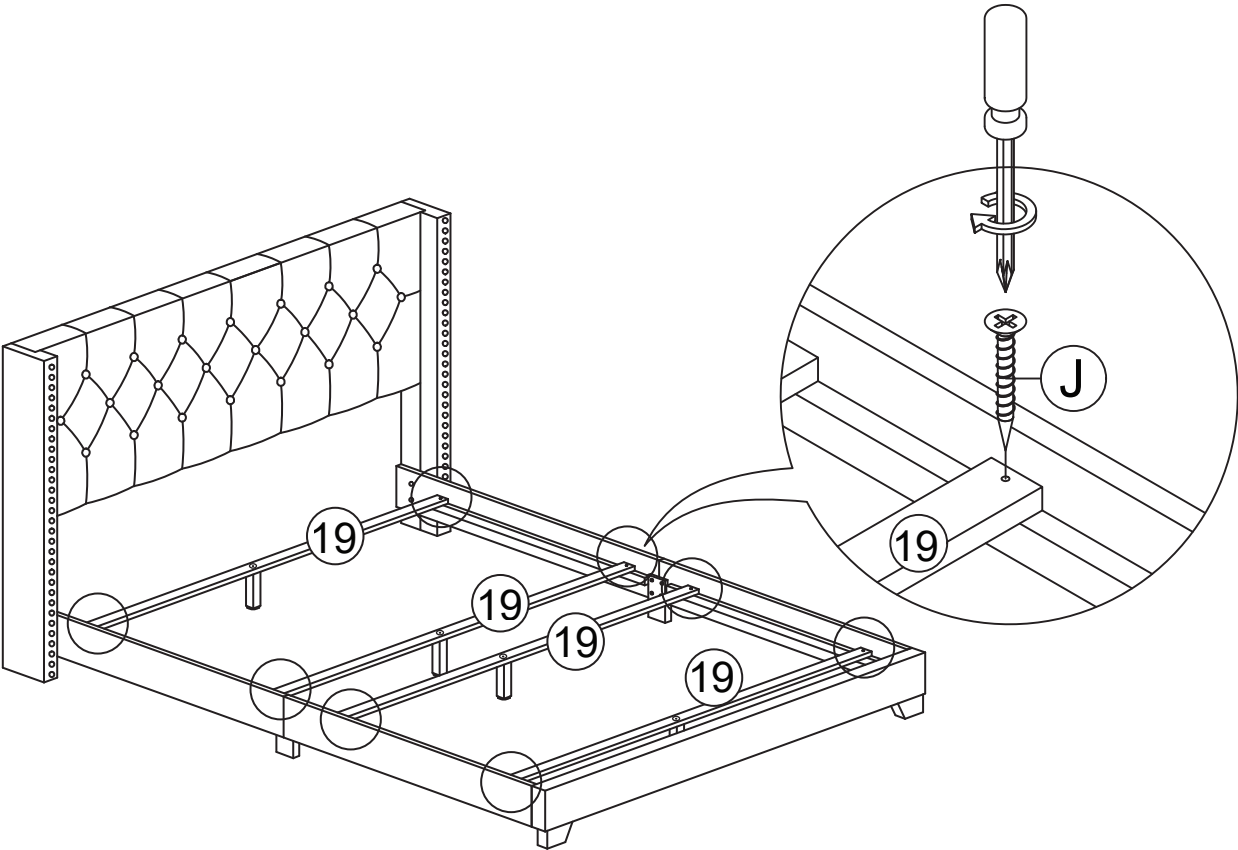




## 80002-FULL/QUEEN BED REPAIR KITS ASSEMBLY INSTRUCTION

### STEP 7

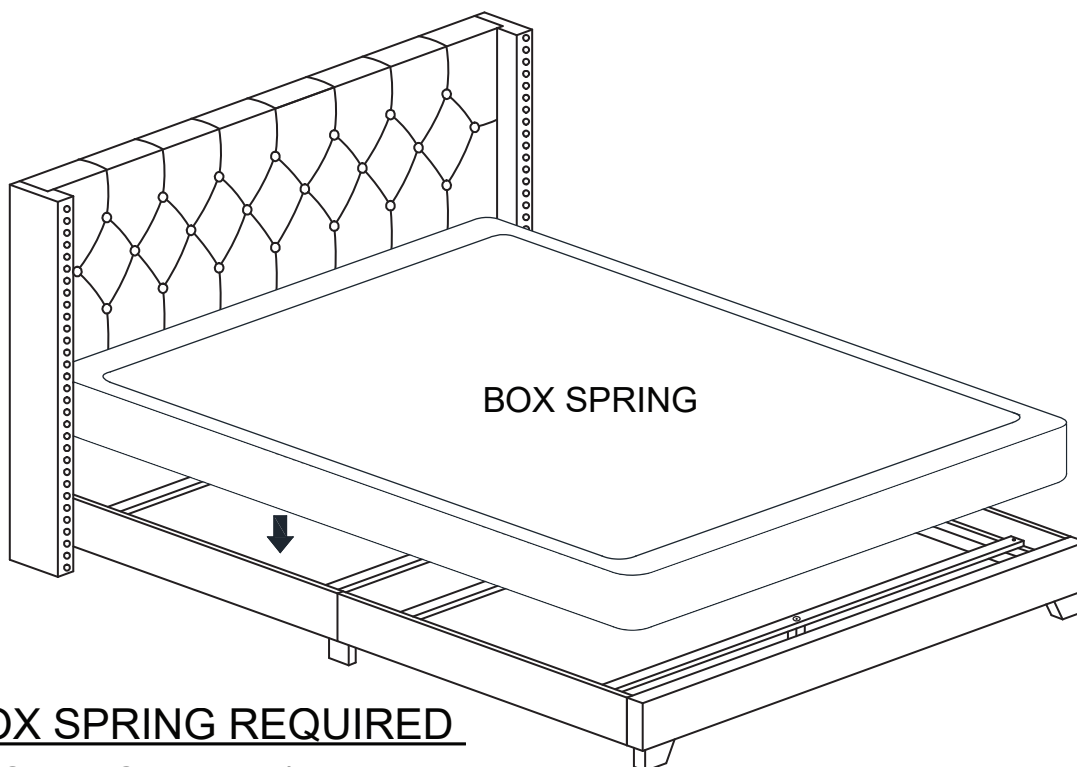

BOX SPRING REQUIRED  
(NOT INCLUDED)

### STEP 8

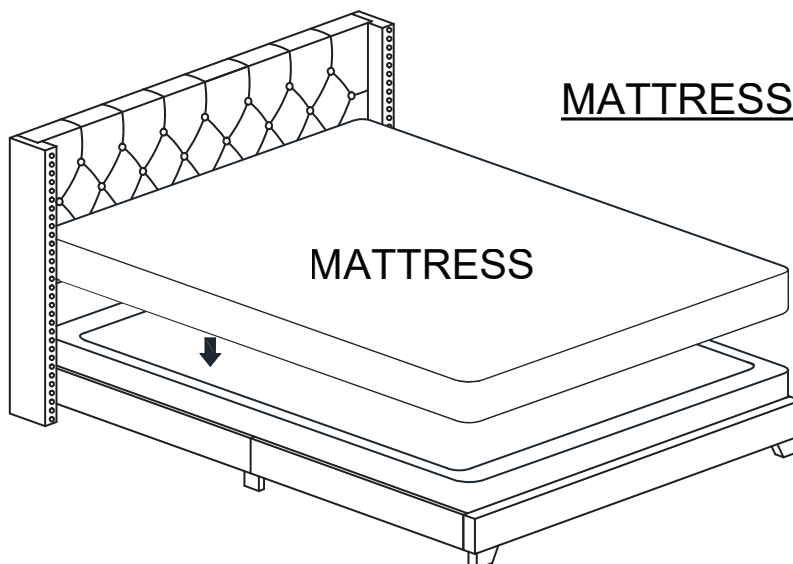

MATTRESS NOT INCLUDED

ASSEMBLY COMPLETED

### IMPORTANT

Discarding Original Components:

After successfully installing the repair kit, please discard the original components. This ensures that the bed frame operates according to the latest specifications.