

# 80071-TWIN BED REPAIR KITS ASSEMBLY INSTRUCTION



80071-TWIN BED <https://youtu.be/yaTFQiOiVhM>

Scan QR Code for Assembly Instruction video or call customer service for video file.

**IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.**

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

**"DO NOT OVERTIGHT ANY HARDWARE"**


**WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.**

## TABLE OF CONTENTS


HARDWARES LIST	PAGE 2
PARTS LIST	PAGE 3
PARTS' LOCATION	PAGE 4
ASSEMBLY STEPS	PAGE 5 - 7
ASSEMBLY COMPLETED	PAGE 8

## ASSEMBLY TOOLS REQUIRED

### 1. Screwdriver (not provide)



### 2. Hammer (not provide)

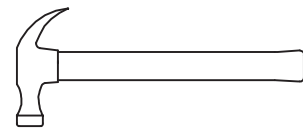

## ATTENTION

### 1. Two-Person Installation Recommendation:








We strongly recommend that two people collaborate to install the repair kit. This ensures efficiency and safety during the installation process.

### 2. Regular Screw Tightness Check:

As part of regular maintenance, it is advised to check the tightness of all screws every 6-8 weeks. This helps maintain the stability and durability of your bed frame.

# 80071-TWIN BED REPAIR KITS ASSEMBLY INSTRUCTION





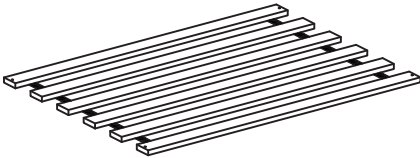
## HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
A	JCBC SCREW M8 x 20MM		8 PCS
B	JCBC SCREW M6 x 35MM		24 PCS
D	SPRING WASHER M6 x 12MM		24 PCS
E	FLAT WASHER M6 x 19MM		24 PCS
F	CSK C/B SCREW (M4 x 32MM)		8 PCS
G	M5 ALLEN KEY (65MM)		1 PC
H	M4 ALLEN KEY (65MM)		1 PC

\*Additional hardware included


80071-TWIN BED REPAIR KITS ASSEMBLY INSTRUCTION

PARTS LIST

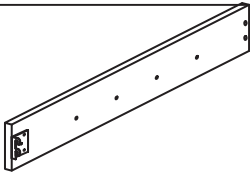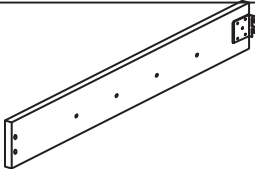ITEM	DESCRIPTION	DRAWING	QTY
6	SIDE RAIL (L)		2 PCS
7	SIDE RAIL (R)		2 PCS
8	SIDE RAIL SUPPORT		4 PCS
9	SIDE RAIL LEG		2 PCS
10	SLAT		2 ROLL

# 80071-TWIN BED REPAIR KITS ASSEMBLY INSTRUCTION


## PARTS ' LOCATION

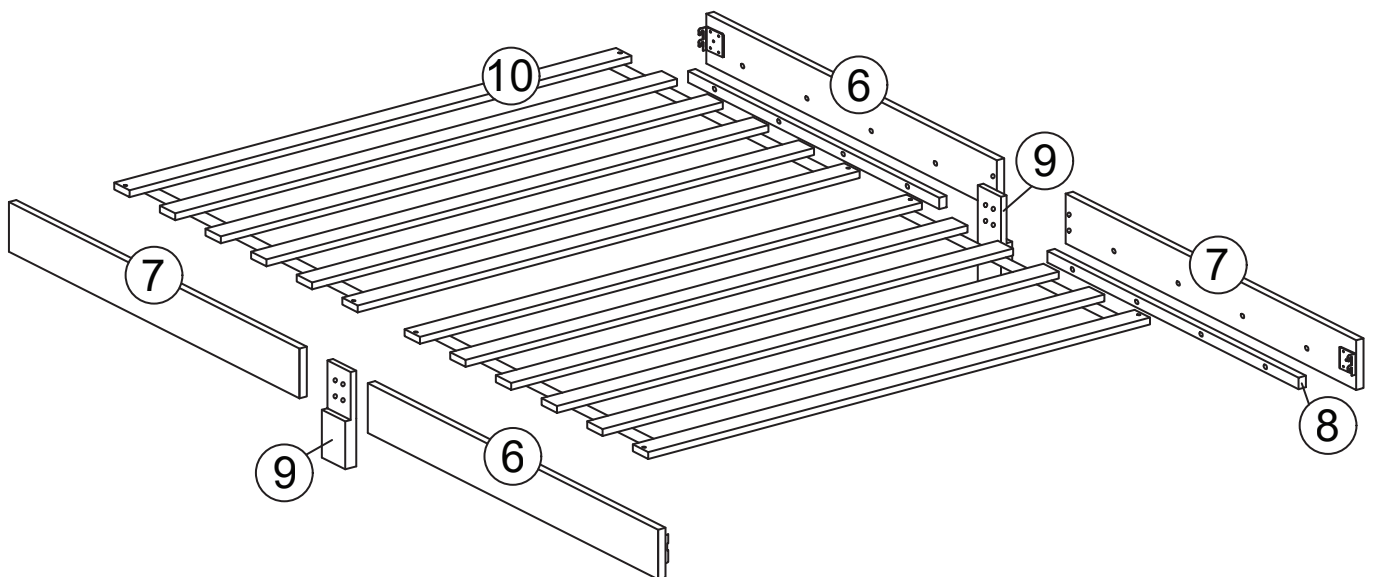


## 80071-TWIN BED REPAIR KITS ASSEMBLY INSTRUCTION

### STEP 1

Please follow the instructions from step 1 to step 2 to assemble the repair kits.

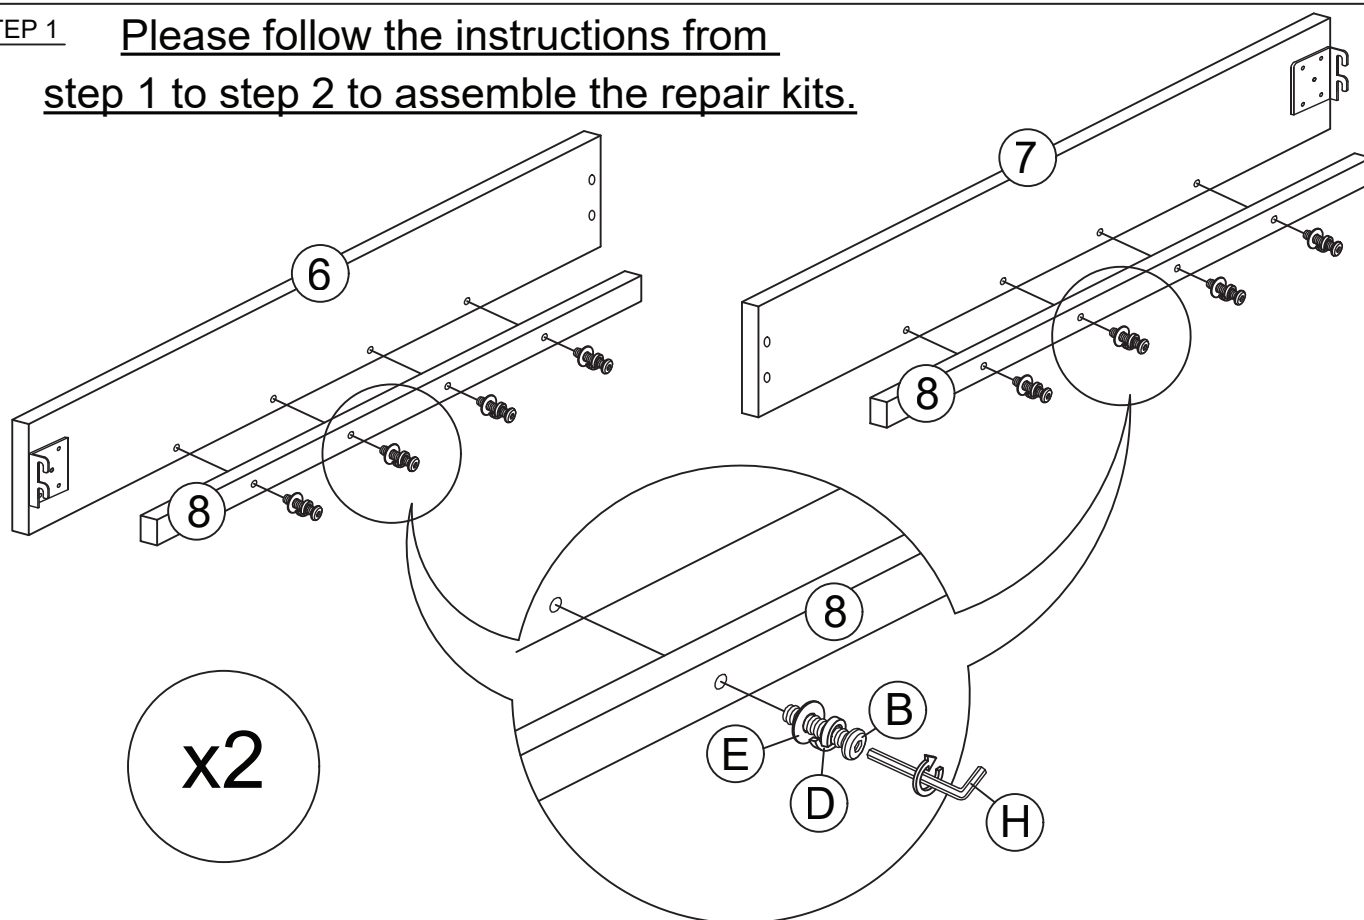


### STEP 2

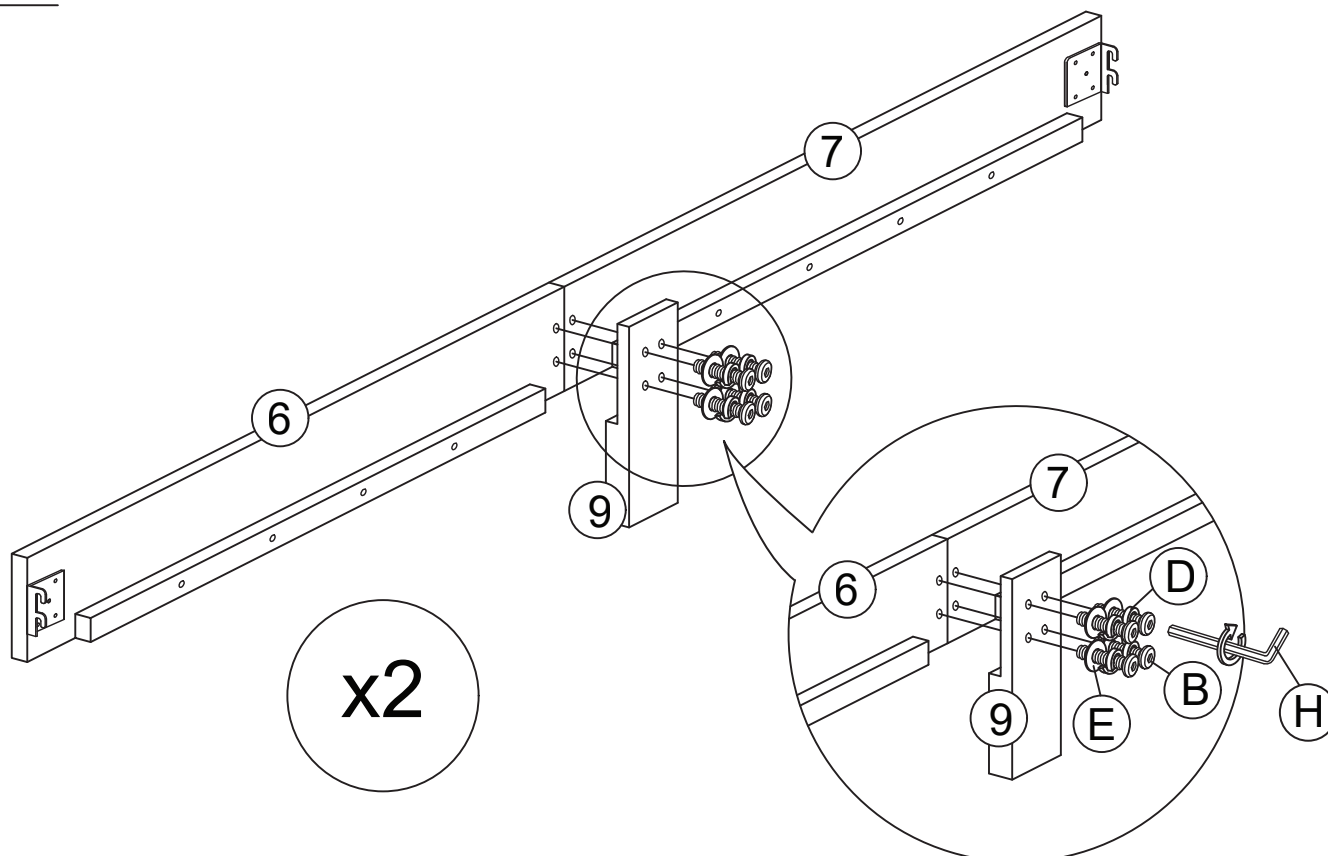

## 80071-TWIN BED REPAIR KITS ASSEMBLY INSTRUCTION


### STEP 3

Please follow the instructions from step 3 to step 7 to disassemble the existing bed in order to replace the repair kits.

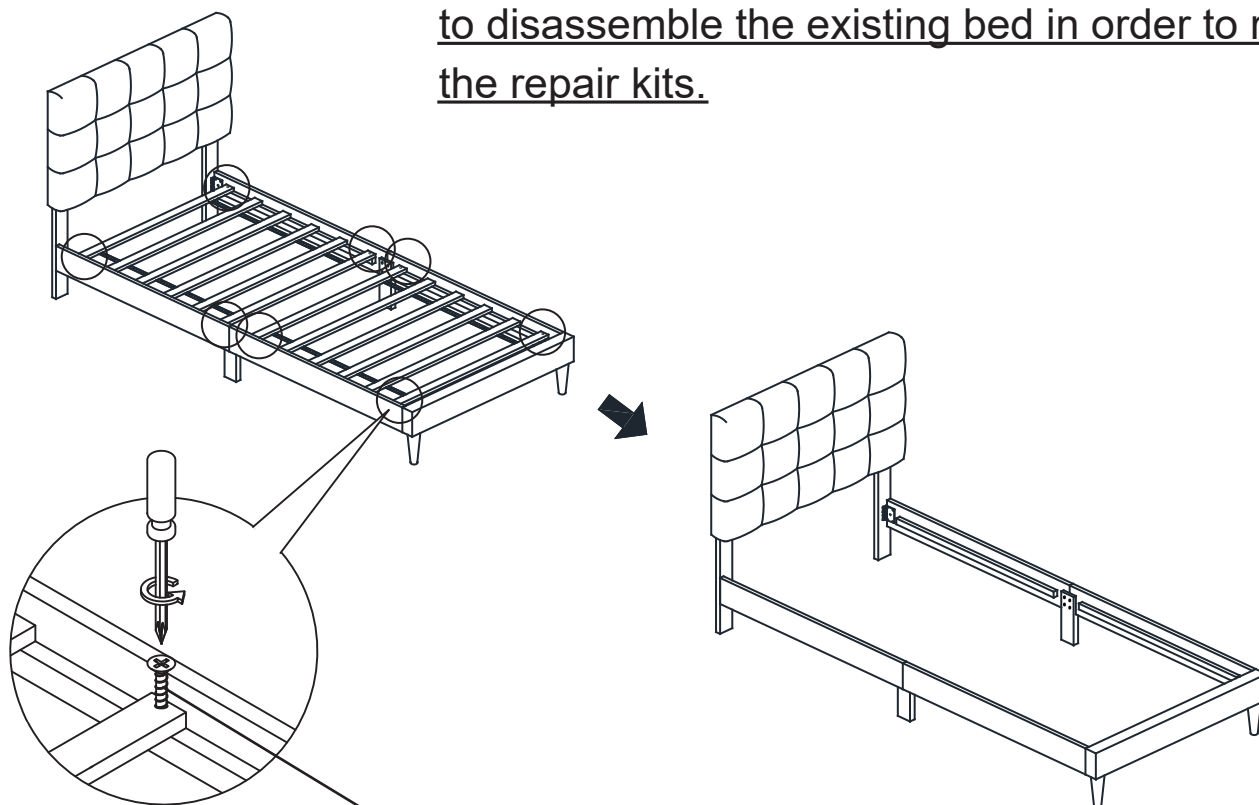

REMOVE THE SCREW

### STEP 4

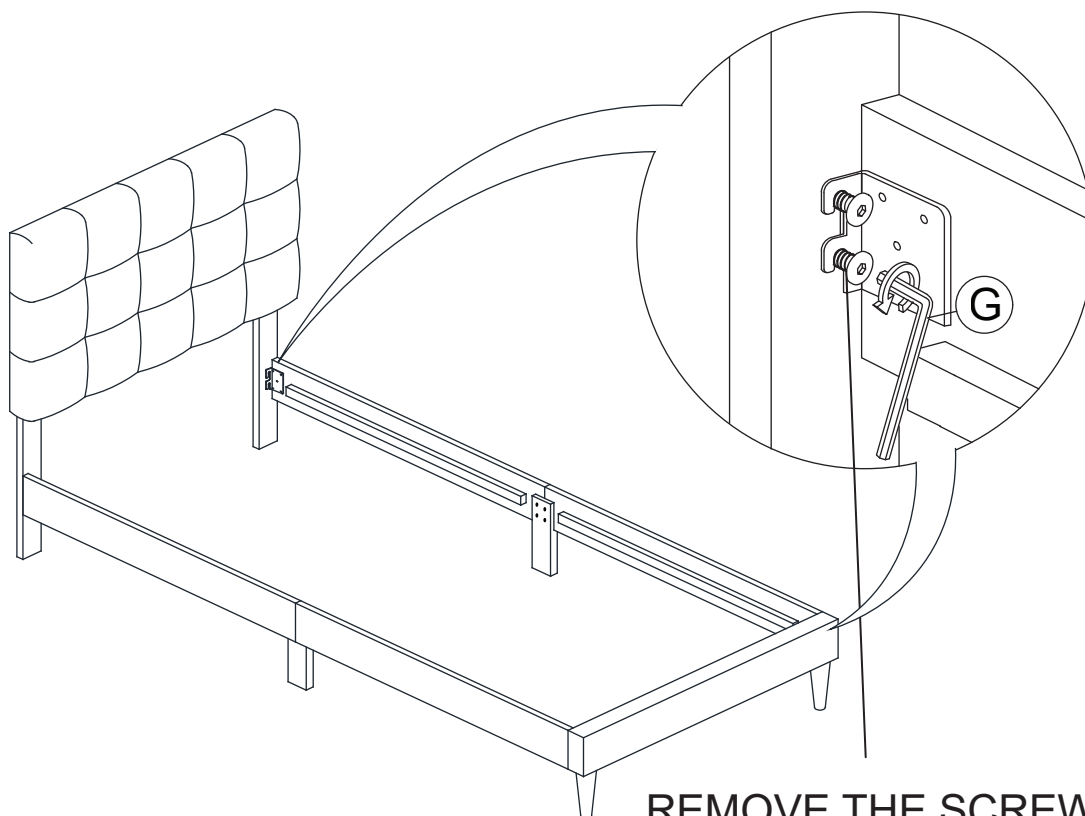


REMOVE THE SCREW


## 80071-TWIN BED REPAIR KITS ASSEMBLY INSTRUCTION

### STEP 5

REMOVE THE EXISTING SIDE RAIL SET,  
AND THEN REPLACE IT WITH THE NEW SIDE RAIL SET.

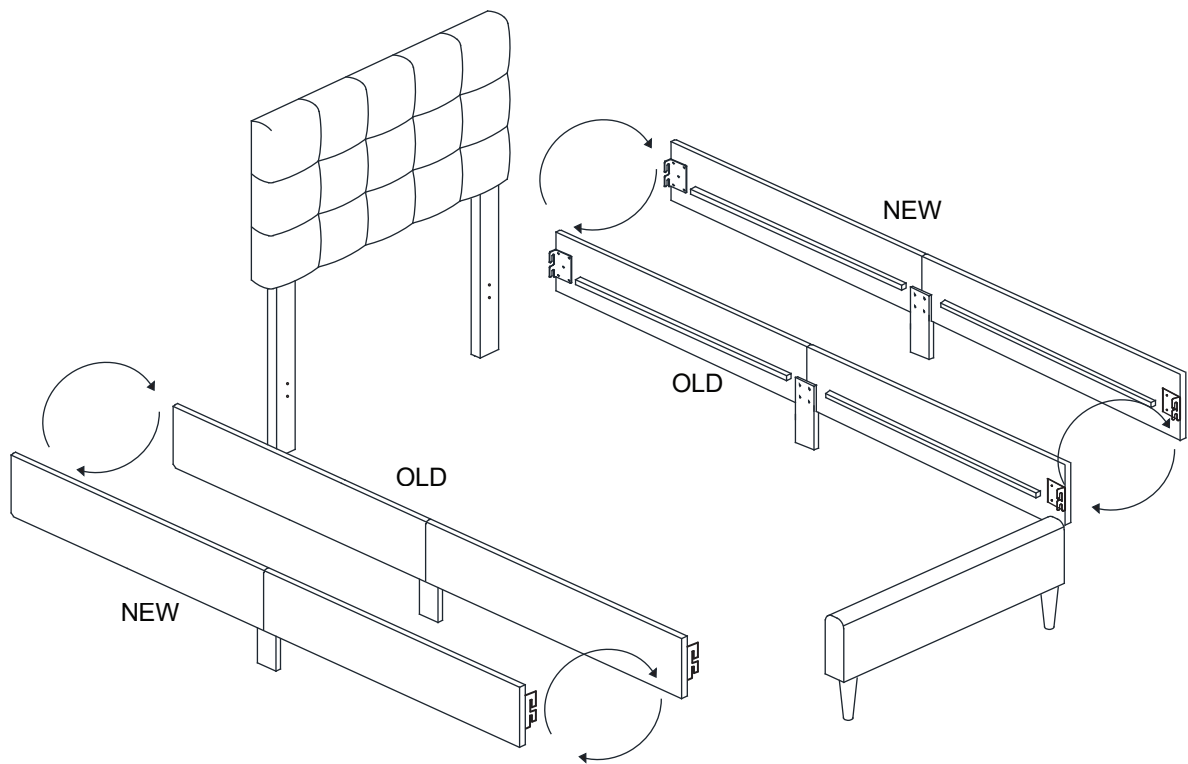


### STEP 6

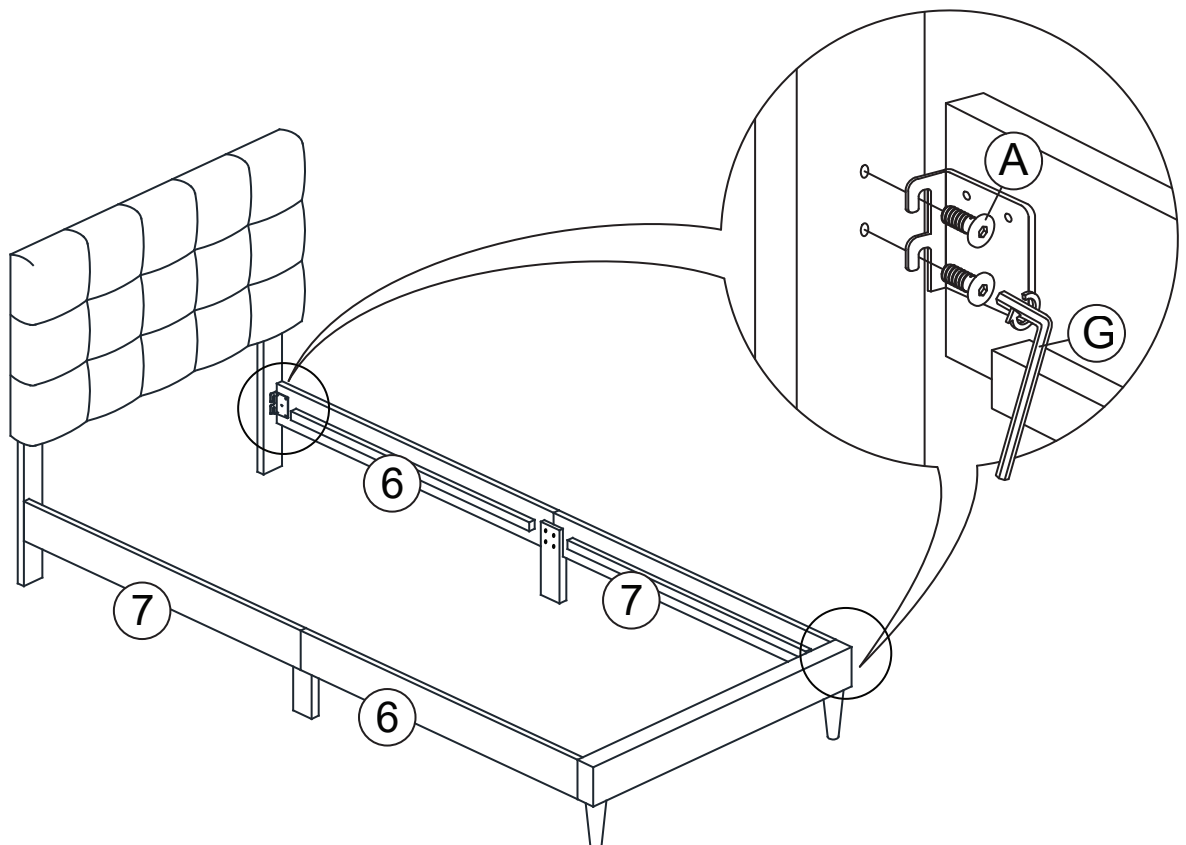


## 80071-TWIN BED REPAIR KITS ASSEMBLY INSTRUCTION

### STEP 7

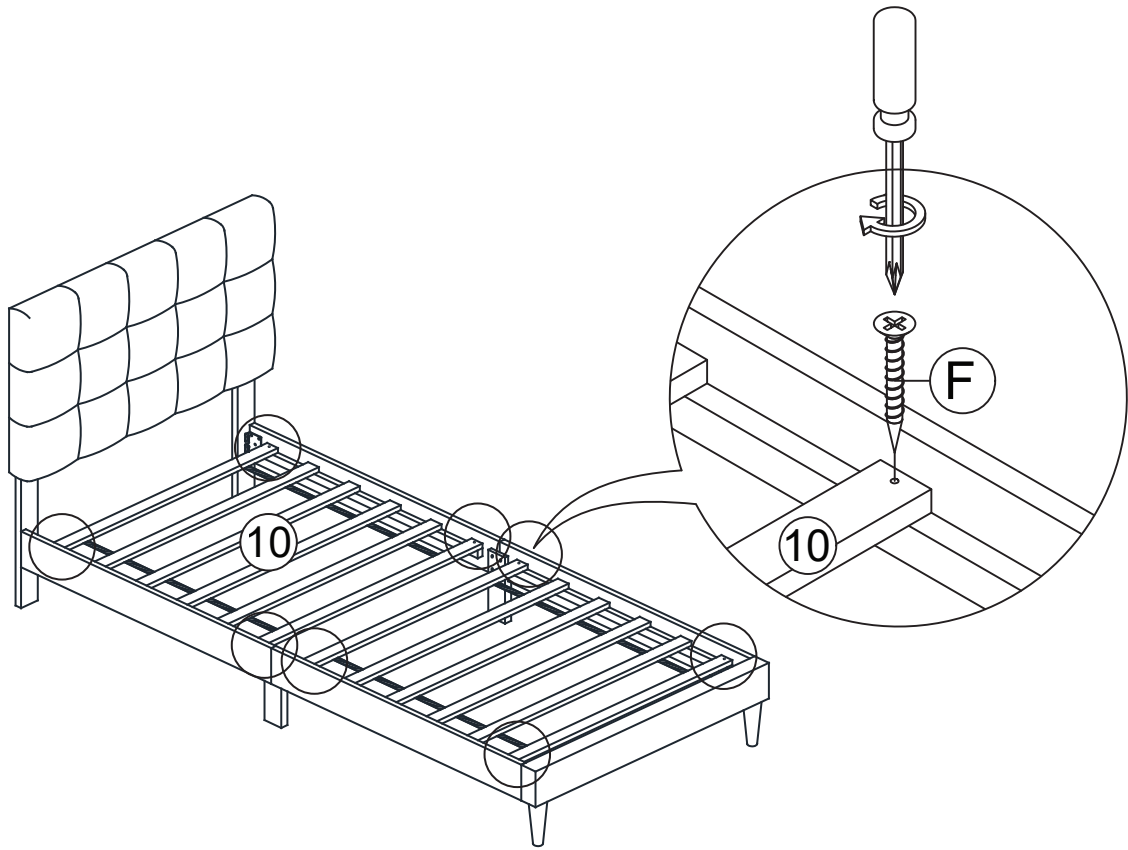

### STEP 8

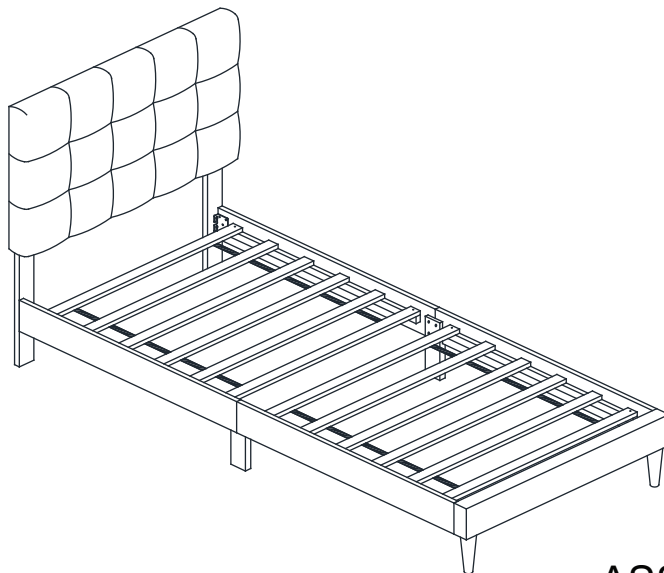

**ASSEMBLY COMPLETED**

### **IMPORTANT**

**Discarding Original Components:**

After successfully installing the repair kit, please discard the original components. This ensures that the bed frame operates according to the latest specifications.